


Electro-magnetic Lock Bracket

(Fully Frameless Glass Door)



User Manual

EL-280F

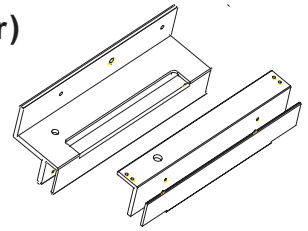

CE FC RoHS

Read the manual before usage and keep for future reference.

1. Function

- 1.The bracket is designed to install magnetic lock on fully frameless glass door,it is elegant and easy to install.
2. The thickness of the glass door is 10~15mm.
- 3.The distance of door gap is 5~10mm.

2. Bracket main components

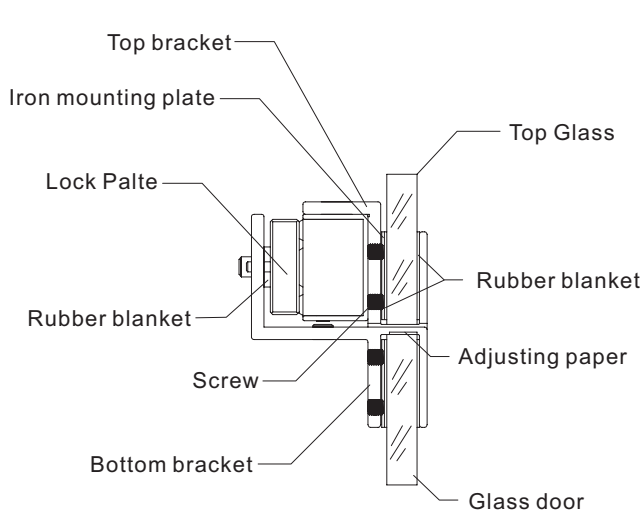


Chart 1

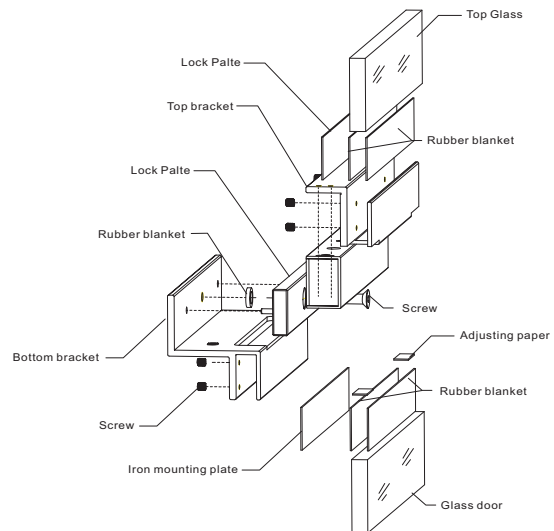


Chart 2

3. Installation

- 1.Measure the gap between the door leaf and door frame.
- 2.Install the top bracket according to the diagram,fix the screw,keep the screw head inside the U-shaped slot.
- 3.Put the rubber mounting plate and Iron mounting plate into the U-shaped slot.
(In order to install easily,paste double-sided adhesive between the rubber mounting plate and the U-shaped slot.)
- 4.Fix the Top bracket in correct position with 4 screw.
- 5.Install the magnetic lock according to the diagram.
- 6.Put the bottom bracket on the glass door(paste double-sided adhesive in case creeping down).
If the door gap is too big,put the adjusting paper inside,adjust the gap to 2mm between the brackets,then fix with 4 screw.
- 7.Install the lock Palte.Make sure the back of lock Palte is installed with rubber blanket,in this way can ensure the holding force, and absorb the impact of movement.
- 8.Turn on the power to test it,make sure the magnetic lock work properly.